




Scottoil: Honda VFR750 (1990 - on) Scottoil vSystem Installation Guide



Note: The [Dual Injector](#) (sold separately) requires an adapter kit, available free of charge from Scottoil.

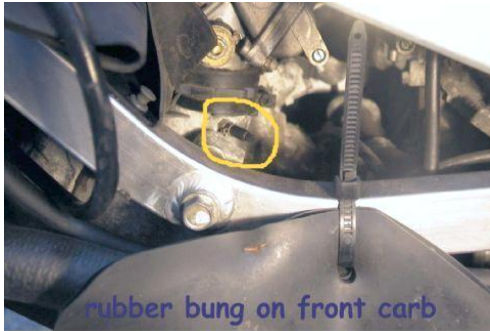

Locate the vacuum – There is a rubber bung over a spigot on the carburettor. Remove this bung and then press the Damper Elbow, part number 4, onto the spigot. For further information see our easy step installation guide - [Vacuum Connections, General](#).
See picture on left




The RMV can be mounted under the seat. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – [Reservoir Positions, General](#).
See picture on left



The Dispenser Assembly can be routed along the Swingarm using Conduit & Glue and secured to the chain guard bolt using the Small Dispenser Plate & Clip. For further information see our easy step installation guide - [Dispenser Assemblies, General](#).
The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards.

If you have a Universal or Touring kit then part number 21 'Small Dispenser Plate' is a new item found in the latest Scottoil vSystem kit. This part can be purchased from www.scottoiler.com reference RM-150062 alternatively you can trim down part 19 from the kit for the same result.
See picture bottom left

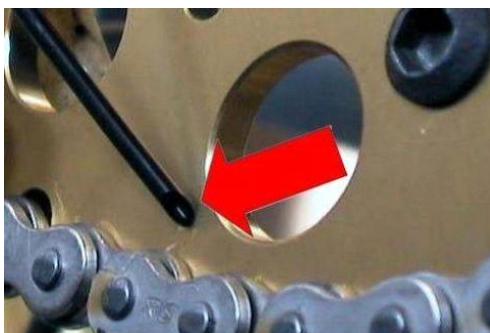

Once fitted, [fill and prime](#) the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoil using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoil to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

Note: This is a generic image

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

